

RM-30BP Compatibility (Rev.9.0)

	PXW-FX9	HXR-NX200	PXW- Z190V/Z190T	PXW- Z280V/Z280T	FDR-AX700	HXR-NX80	PXW-Z90V /PXW-Z90T	HXR-NX5R	PXW-FS5	
	V1.0	V1.0	V3.0	V3.0	V1.01	V1.01	V2.0(Tentative)	V1.11	V2.0	V3.0/V4.0.03
Zoom	Auto/Manual Dial	○	○	○	○	○	○	○	○	○
Iris	Auto/Manual	○	○	○	○	○	○	○	○	○
	Push Auto Iris	○	○	○	○	○	○	○	○	○
Focus	Auto/Manual	○	○	○	○	○	○	○	○	○
	Dial	○	○	○	○	○	○	○	○	○
REC Start/Stop	Push Auto Focus	○	x	○	x	x	○	○	○	○
WHIT BAL		○	○	○	○	○	○	○	○	○
PRESET		○	○	○	○	○	○	○	○	○
A		○	○	○	○	○	○	○	○	○
B		○	○	○	○	○	○	○	○	○
WB SET		○	○	○	○	○	○	○	○	○
GAIN		○	○	○	○	○	○	○	○	○
GAIN SELECT		○	x	○	x	x	x	○	○	○
SHUTTER		○	○	○	○	○	○	○	○	○
(SHUTTER SELECT) (*1)		○	○	○	○	○	○	○	○	○
Menu		○	○	○	○	○	○	○	○	○
SEL./SET	Up/Down	○	○	○	○	○	○	○	○	○
	Right/Left	○	○	○	○	○	○	○	○	○
CANCEL/BACK	Execute	○	○	○	○	○	○	○	○	○
		○	-	○	○	x	x	-	-	-
THUMBNAIL		○	○	○	○	○	○	○	○	○
DISPLAY		○	○	○	○	○	○	○	○	○
ASSIGN1		○	○	○	○	○	○	○	○	○
ASSIGN2		○	○	○	○	○	○	○	○	○
ASSIGN3		○	○	○	○	○	○	○	○	○
ASSIGN4		○	○	○	○	○	○	○	○	○
ASSIGN5		○	○	○	○	○	○	○	○	○
ASSIGN6		○	○	○	○	○	○	○	○	○
ASSIGN DIAL	Auto/Manual	○	-	○	x	x	x	-	x	○
	Dial	○	-	○	x	x	x	-	x	○
ND	Push Auto ND	○	-	○	x	x	x	-	-	○
TALLY(*2)		○	○	○	○	○	○	○	x	○
COUNTER RESET(*2)		○	○	○	○	○	○	○	○	○
Daisy Chain		○	○	○	○	○	○	○	○	○

*1) Use the joystick up/down for SHUTTER SELECT
 *2) Command from MCX-500. No dedicated key on the RM-30BP
 *3) Not so smooth
 *4) Very slow move when in low speed zoom operation
 *5) Work on RM-1BP Focus
 *6) Work on RM-1BP REC Start/Stop
 *7) No REC Tally on RM-30BP
 *8) Needed to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.
 *9) Needed to press "WHT BAL" button on a camcorder first.

RM-30BP Compatibility

	PXW-FS5M2	PXW-Z150	PXW-V2.02	PXW-FS7	PXW-FS7M2	PXW-X180 /X160	PXW-Z100	FDR-AX1	HXR-NX100	HXR-NX3	HXR-NX1	HXR-NX5	HXR-NX70	HXR-MC2500	
Zoom	V1.0	V1.0	V2.02	V4.31	V1.22	V3.1	V4.01	V5.1	V4.0	V1.0	V2.0	V1.0	V2	V3.0	V1.0
Auto/Manual	○	○	○	○	○	○(*4)	○(*4)	○	○	○	○	○	○	○	○
Dial	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○(*8)
Push Auto Iris	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Auto/Manual	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Dial	○	○	○	○	○	○(*5)	○(*5)	○(*5)	○	○	○	○	○	○	○
Push Auto Focus	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
REC Start/Stop	○	○	○	○	○	○	○(*7)	○(*7)	○	○	○	○	○	○	○
WHT BAL	○	○	○	○	○	○	○	○	○(*9)	○	○	○	○	○	○(*9)
PRESET	○	○	○	○	○	○	○	○	○(*9)	○	○	○	○	○	○(*9)
A	○	○	○	○	○	○	○	○	○(*9)	○	○	○	○	○	○(*9)
B	○	○	○	○	○	○	○	○	○(*9)	○	○	○	○	○	○(*9)
WB SET	○	○	○	○	○	○	○	○	○(*9)	○	○	○	○	○	○(*9)
GAIN	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
GAIN SELECT	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
SHUTTER	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
(SHUTTER SELECT) (*1)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Menu	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Up/Down	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Right/Left	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Execute	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
CANCEL/BACK	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
THUMBNAIL	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
DISPLAY	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ASSIGN1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ASSIGN2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ASSIGN3	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ASSIGN4	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ASSIGN5	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ASSIGN6	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ASSIGN DIAL	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Auto/Manual	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Dial	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Push Auto ND	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
TALLY(*2)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
COUNTER RESET(*2)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Daisy Chain	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

“○”:work “X”: doesn't work “-”:NA

- *1) Use the joystick up/down for SHUTTER SELECT
- *2) Command from MCX-500. No dedicated key on the RM-30BP
- *3) Not so smooth
- *4) Very slow move when in low speed zoom operation
- *5) Work on RM-1BP Focus
- *6) Work on RM-1BP REC Start/Stop
- *7) No REC Tally on RM-30BP
- *8) Needed to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.
- *9) Needed to press "WHT BAL" button on a camcorder first.

RM-30BP Compatibility

	HXR-MC2000	HXR-MC1500	NEX-FS700/R V3.2	NEX-EA50 V2.0	NEX-FS100 V2.0	HVR-Z7	HVR-Z5	HVR-S270	HVR-HD1000	HVR-A1	HVR-V1	HVR-Z1	DSR-PD150P /PD177P /PD198P
Zoom	Auto/Manual	X	X	O	O	O	O	O	O	X	X	X	O
	Dial	X	X	O	O	O	O	O	X	X	X	X	O
Iris	Push Auto Iris	X	X	O	O	O	O	O	X	X	X	X	O
	Auto/Manual	O	O	O	O	O	O	O	O	X	O	X	O
Focus	Dial	X	X	O	O	O	O	O	X	X	X	X	O
	Push Auto Focus	X	X	X	X	O	O	O	X	X	X	X	O
REC Start/Stop	O	O	O	O	O	O	O	O	O	O	O	O	O
WHT BAL	X	X	O	O	O	O	O	O	X	X	O	O	O
PRESET	-	-	O	O	O	O	O	O	-	-	X	X	O
A	-	-	O	O	O	O	O	O	-	-	X	X	O
B	-	-	O	O	O	O	O	O	-	-	X	X	O
WB SET	X	X	O	O	O	O	O	O	X	X	X	X	O
GAIN	X	X	X	X	X	X	X	X	X	X	X	X	X
GAIN SELECT	X	X	X	X	X	X	X	X	X	X	X	X	X
SHUTTER	X	X	O	O	O	O	O	O	X	X	X	X	O
(SHUTTER SELECT) (*1)	X	X	O	O	O	O	O	O	X	X	X	X	O
Menu	X	X	O	O	O	O	O	O	X	X	O	O	O
SEL./SET	Up/Down	O	O	O	O	O	O	O	O	X	O	X	O
	Right/Left	O	O	O	O	O	O	O	O	X	O	X	O
	Execute	O	O	O	O	O	O	O	O	X	O	X	O
CANCEL/BACK	-	-	-	-	-	-	-	-	-	-	-	-	-
THUMBNAIL	-	-	X	X	X	-	-	-	-	-	-	-	-
DISPLAY	O	O	O	O	O	O	O	O	O	O	O	O	O
ASSIGN1	-	-	O	O	O	O	O	O	-	X	X	X	O
ASSIGN2	-	-	O	O	O	O	O	O	-	-	X	X	O
ASSIGN3	-	-	O	O	O	O	O	O	-	-	X	X	O
ASSIGN4	-	-	O	O	O	O	O	O	-	-	X	X	O
ASSIGN5	-	-	O	O	O	O	O	O	-	-	X	X	O
ASSIGN6	-	-	O	O	O	O	O	O	-	-	X	X	O
ASSIGN DIAL	-	-	-	-	-	-	-	-	-	-	-	-	-
ND	Auto/Manual	-	-	-	-	-	-	-	-	-	-	-	-
	Dial	-	-	-	-	-	-	-	-	-	-	-	-
Push Auto ND	-	-	-	-	-	-	-	-	-	-	-	-	
TALLY(*2)	X	X	X	X	X	X	X	X	X	X	X	X	X
COUNTER RESET(*2)	X	X	O	O	O	O	O	O	X	O	O	O	O
Daisy Chain	X	X	X	X	X	O	O	O	O	O	O	O	O

*1) Use the joystick up/down for SHUTTER SELECT
 *2) Command from MCX-500. No dedicated key on the RM-30BP
 *3) Not so smooth
 *4) Very slow move when in low speed zoom operation
 *5) Work on RM-1BP Forcus
 *6) Work on RM-1BP REC Start/Stop
 *7) No REC Tally on RM-30BP
 *8) Needed to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.
 *9) Needed to press "WHT BAL" button on a camcorder first.